

## CLEAT 34200


### Mounting instructions

#### Fixings

- Bolt M8, min.l. 50 mm
- Washer M8/max. Outer diam.16 mm


1. Press the plastic washers to the cleat, small holes come inward. Place the cleat installation position.

Install the washer and then the bolts.  
Tighten the bolts.

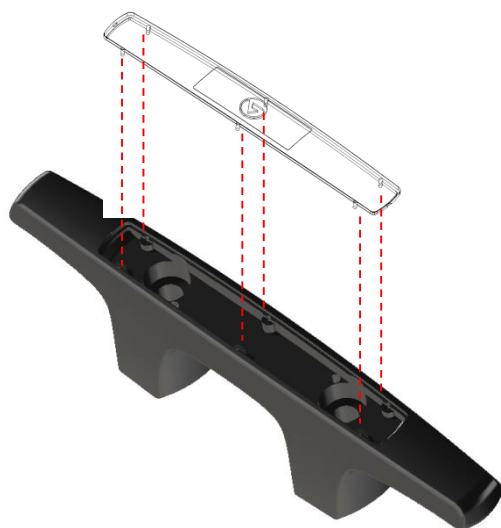

2. Press the cover in place, and secure that all the cover pins go to the holes inside in the body.

Press the cover down so, that the cover sticks in place.

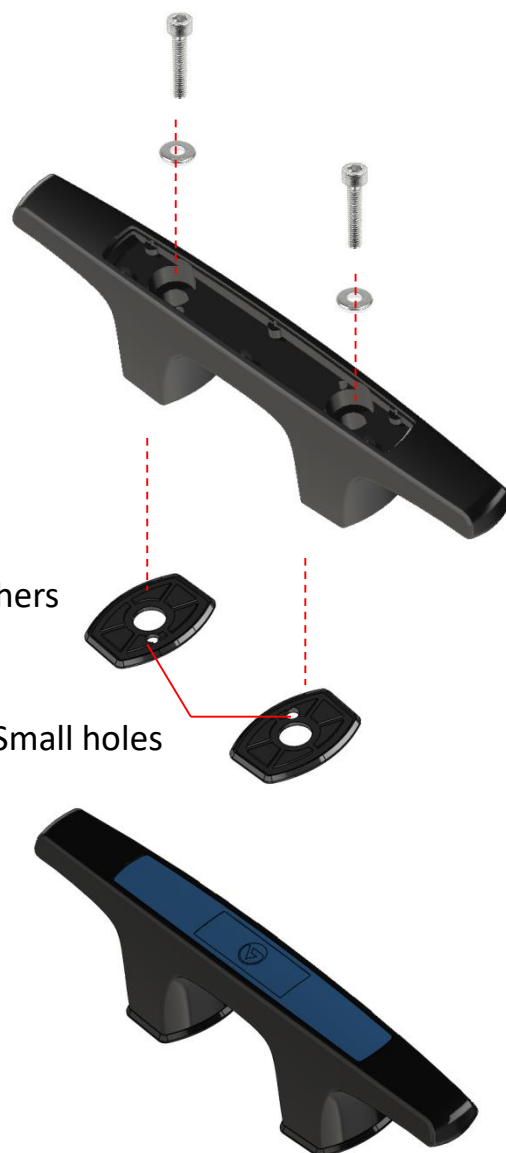

3. Hit with a rubber hammer carefully cover the same surface of the body surface.