


HANDLE 35200

Mounting instructions

Fixings screws

options:

- machine screw M6
- Screws Ø5
- Blind rivets Ø5 mm

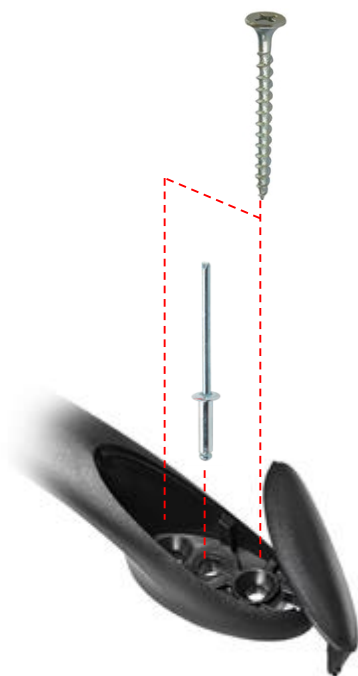

Fixing the handle in right position.
Drill a hole of the right size.



Install the cover as shown, top edge first.

bend the cover slightly downwards, so that the locking head locks in place. The cover is properly installed when its surface is at the same level as the handle